Thermo Scientific AquaSensors DataStick

Wide-range turbidity measurement system

Thermo Scientific[™] AquaSensors[™] DataStick[™] measurement system for universal plug & play.

Markets/Applications

- · Drinking water
 - Raw water monitoring
 - Back wash monitoring
- · Wastewater effluent
- · Process clarity monitoring



Thermo Scientific AquaSensors Wide-Range Turbidity DataStick

- 0 to 4000 NTU measurement range
- Conforms to ISO 7027
- 90 degree and 180 degree light paths
- Rugged, foul resistant construction
- Local and remote configuration and diagnostics
- Temperature measurement included
- · Direct data reporting
- Plug & play industrial communications adapters

Connect this wide-range turbidity sensor directly to a PLC (Programmable Logic Controller) for seamless integration with industrial control systems. Use any computer to display data, calibrate and customize the measurement without an intermediate analyzer electronics box.

This wide-range turbidity sensor head is pre-calibrated for turbidity and temperature. Can be plugged into any DataStick communications adapter for interactive measurement, calibration, configuration and diagnostics with industrial computers or Thermo Scientific AquaSensors AV38 Local display.






Engineering Specifications

- The Wide-Range Turbidity sensor shall use the method described in ISO 7027 to measure turbidity. The turbidity measurement range shall be 0 to 4000 NTU. Resolution shall be 0.1 NTU.
- 2. The Wide-Range Turbidity sensor will be capable of measuring 180 degree light to compensate 90 degree measurements.
- 3. The sensor shall be constructed of a material with exceptional chemical resistance and mechanical strength. This material shall enable the sensor to be installed in metal fittings without leakage usually caused by heating and cooling cycles when dissimilar materials are threaded together.
- 4. The sensor shall have interchangeable, pre-calibrated plug-in sensor heads and communications adapters that can be installed without powering down the system.
- The sensor shall have 1 inch NPT threads to mount into a standard 2 inch union mounting, or immersion mounting hardware.
- The built-in electronics of the sensor shall be completely encapsulated and O-ring sealed for protection from moisture and humidity.
- 7. The sensor shall have a built-in pre-amplifier, universal signal conditioning electronics, universal engineering units conversion, and interactive communications with a host computer or display interface using one of several protocols including Modbus® RTU, DeviceNet™, Profibus, USB, CANopen, Ethernet.
- 8. The sensor shall have an integral temperature sensor to measure temperature independently.
- The sensor shall be Thermo Scientific AquaSensors wide-range turbidity DataStick.

Thermo Scientific DataStick Analytical System

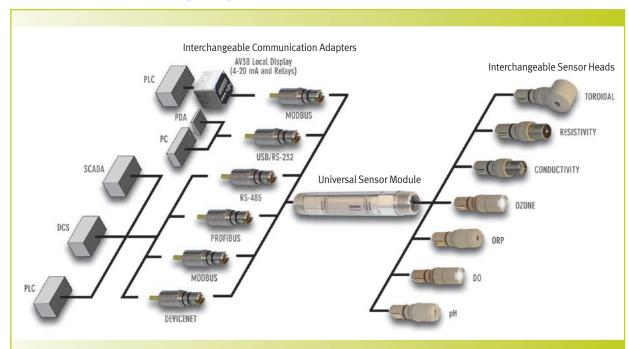

Key Components

Wide-Range Water Turbidity Sensor Head

Pre-calibrated for turbidity and temperature. Can be plugged into any DataStick communications adapter for interactive measurement, calibration, configuration and diagnostics with industrial computers or AquaSensors AV38 local display.



Plugs into the DataStick to provide power and direct interactive communications with control systems.



Wash Head

In applications where the sensor head is quickly fouled with sediment, a wash head assembly can be attached. The head slips on the body of the sensor and the wash nozzle is aligned with the sensor fingers. Actuation is controlled by an AV38 wash relay that is programmfifed with a wash interval and duration.




AV38 Local Display/Controller

2 line display and 7 key navigation. Data reporting with up to 2 current outputs. 2 Form C relays. Digital communications.



Thermo Scientific AquaSensors Wide-Range Turbidity DataStick

Provides universal conversion of sensor signals and interactive communications for measurement, calibration, configuration and diagnostics. Mounting adapters, junction boxes and recharge kits are available.

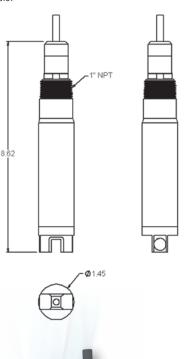




	Specifications
Measurement	Range: 0 to 4000 NTU
System	Resolution: 0.1 NTU
Performance [†]	Accuracy: 1 % of reading
	Step Response Time: 90 % in 15 seconds
Operational	Temperature Range: -5 °C to 50 °C
Environment	Maximum Pressure: 65 psig @ 50 °C
	Maximum Flow Rate: 10 ft/second
Power	Voltage Range: 10 to 30 VDC
Requirements [‡]	Maximum Power: 200 mW
	Typical Power: 120 mW
Construction	Windows: Quartz
	Optical Topology: Detection at 90 degrees
	and 180 degrees to source 0-rings: Viton®
	Sensor Head Material: Polycarbonate
	Weight: 1.2 lbs
Units Of Measure	Turbidity Mode: NTU
omito or modouro	Temperature Units: °C, °F
Calibration††	Sample: 1 and 2 point
	Zero: 1 point
	Temperature: 1 point
Measurement	Turbidity: 90 degree/180 degree,
Modes	narrow beam, IR light
	Temperature: Automatic from -5 °C to 50 °C
Other	Sensor Filter: 0 to 100 seconds
Configuration	Temperature Filter: 0 to 100 seconds
Options	
Approvals	Immunity & Emissions:
And Ratings	CE certified 89/336/EEC: CISPER 11,
	EN61000 (-4-2, -4-3, -4-4, -4-6, 4-8)
	Safety: cULus listed; 367G E303570
	Hazardous Locations: Haz Loc Class 1,
	Division 2, Groups A, B, C, D. T5 Max ambient 50 °C
	10 IVIAX AITIDIEITE OU TO

 † Note: Typical at 25 $^{\circ}\text{C}$ performance unaffected by cable length

[‡] Note: Class II DC power supply required

††Note: Turbidity and temperature are pre-calibrated at the factory

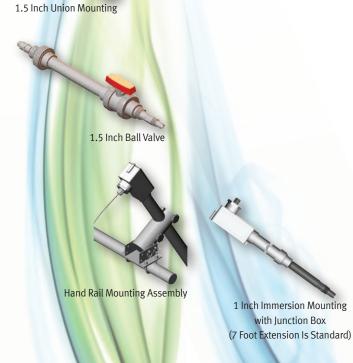

Thermo Scientific AquaSensors Wide-Range Turbidity DataStick

- Global support—with experience that comes from supporting our customers for over 35 years throughout the world, our water quality specialists and customer support teams offer a quick, thorough and professional response to any problem encountered.
- Focus on user benefits—we work closely with you to define your needs, and ensure you are using the monitor in a way that improves your bottom line. For more information, contact your local water quality specialists or visit: www.thermoscientific.com/processwater.

Turbidity DataStick Ordering Information	
Part No.	Description
RT-b-x-y-z	DataStick and Communications
Measurement Mode (b)	1 = Turbidity
Back-Body and Communications Material (x)	1 = CPVC 2 = 316 Stainless Steel
Communications (y)	4 = Modbus RTU 5 = DeviceNet 6 = CANopen 7 = Ethernet 8 = USB
Cable Length (z)	1 = 10 feet 2 = 20 feet 3 = 30 feet

Accessories Ordering Information		
Part No.	Description	
Local Display/Controller Interface		
AV38	$\ensuremath{\mathcal{V}}$ DIN, outputs, relays, digital communications options	
Formazin Calibration Solutions and Accessories		
FOR40	40 NTU CAL kit	
FOR4K	4000 NTU stock, 500 mL bottle	
MH1222	Wash head assembly	
Mounting Hardware		
MH1042-RT	1.5 inch union mounting, CPVC	
MH1041-RT	1.5 inch union mounting, 316 SS	
MH1112	1.5 inch ball valve, CPVC, low pressure	
MH1111	1.5 inch ball valve, 316 SS, low pressure	
MH1122	1.5 inch ball valve, CPVC, high pressure	
MH1121	1.5 inch ball valve, 316 SS, high pressure	
MH1042	Hand rail mounting assembly, swivel/immersion, PVC	
MH1052	Hand rail mounting assembly, swivel/immersion with ball float	
MH3083	1 inch immersion mounting with junction box, PVC (7 foot extension is standard)	
Consult factory for additional configurations and accessories.		

thermoscientific.com/processwater

© 2014 Thermo Fisher Scientific Inc. All rights reserved. Viton is a registered trademark of E. I. Du Pont De Nemours & Company. Modbus is a registered trademark of Schneider Electric. DeviceNet is a trademark of ODVA. All other trademarks are the property of Thermo Fisher Scientific and its subsidiaries.

Water Analysis Instruments

North America Toll Free: 1-800-225-1480 Tel: 1-978-232-6000 info.water@thermo.com Netherlands Tel: (31) 020-4936270 info.water.uk@thermo.com

China Tel: (86) 21-68654588 wai.asia@thermofisher.com India Tel: (91) 22-4157-8800 wai.asia@thermofisher.com

Singapore Tel: (65) 6778-6876 wai.asia@thermofisher.com **Japan** Tel: (81) 045-453-9175 wai.asia@thermofisher.com

Australia Tel: (613) 9757-4300 in Australia (1300) 735-295 InfoWaterAU@thermofisher.com

