Thermo Scientific AquaSensors DataStick

Dissolved oxygen (ppm and ppb) measurement system

Thermo Scientific™ AquaSensors DataStick measurement system for universal plug & play.

Markets/Applications

- · Municipal and industrial wastewater
 - Aeration tanks
 - Aerobic digesters
 - Plant effluent monitoring (NPDES permit holders)
 - Anaerobic digesters
- Aquaculture
- Brewing
- Fermentation
- Bio-processing
- Many applications also exist in chemical process, food and dairy, pulp and paper, and other process industries
- Boiler feed water (ppb)
- Pharmaceutical (ppb)
- Semiconductor manufacturing (ppb)
- Ultrapure water (ppb)
- Power plants (ppb)



Thermo Scientific™ AquaSensors D0 DataStick™

- Clark cell technology
- Pre-calibrated (no field calibration required)
- Plug & play sensor heads
- Rugged, foul resistant membrane
- Electrode protection options
- Simple membrane cap replacement
- Direct data reporting (24-bit)
- · Plug & play industrial communications adapters

Connect this DO sensor directly to a PLC (Programmable Logic Controller) for seamless integration with industrial control systems. Use any computer to display data, calibrate and customize the measurement without an intermediate analyzer electronics box. Sensor heads are pre-calibrated and can be replaced or exchanged with any other type of sensor without taking the system down. Save space, time and money.






Engineering Specifications

- The DO sensor shall use thee-electrode polarographic Clark Cell technology consisting of a silver reference electrode, a silver anode and a gold cathode.
- 2. The sensor shall have hex-shaped wrench flats to facilitate mounting, and shall be constructed of a material with exceptional chemical resistance and mechanical strength. This material shall enable the sensor to be installed in metal fittings without leakage usually caused by heating and cooling cycles when dissimilar materials are threaded together.
- 3. The sensor shall have interchangeable, pre-calibrated plug-in sensor heads

- and communications adapters that can be installed without powering down the system.
- 4. The sensor shall have 1 inch NPT threads on both ends to mount into a standard 1 inch pipe tee, a 1.5 inch union mounting, or immersion mounting hardware and ball-float assemblies.
- The built-in electronics of the sensor shall be completely encapsulated and O-ring sealed for protection from moisture and humidity.
- 6. The sensor shall have a built-in pre-amplifier, universal signal conditioning electronics, universal engineering units conversion, and interactive

- communications with a host computer or display interface using one of several protocols including Modbus® RTU, DeviceNet™, PROFIBUS™, USB, CANopen or Ethernet.
- The sensor shall have an integral temperature sensor to measure temperature independently.
- 8. Replaceable membranes cartridges shall have a pre-installed 50 micron thick gas permeable membrane.
- 9. The sensor shall be Thermo Scientific AquaSensors Dissolved Oxygen DataStick.

Thermo Scientific DataStick Analytical System

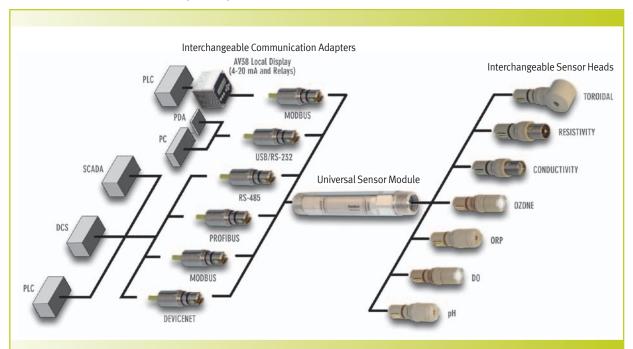

Key Components

DataStick

Provides universal conversion of sensor signals and interactive communications for measurement, calibration, configuration and diagnostics.



Dissolved Oxygen Sensor Head

Pre-calibrated for dissolved oxygen and temperature. Can be plugged into any DataStick to yield accurate 24-bit data.



Communications Adapter

Plugs into the DataStick to provide power and direct interactive communications with control systems.




AV38 Local Display/Controller


2 line display and 7 key navigation. Data reporting with up to 2 current outputs. 2 Form C relays. Digital communications.



Thermo Scientific AquaSensors DO DataStick

Provides universal conversion of sensor signals and interactive communications for measurement, calibration, configuration and diagnostics. Mounting adapters, junction boxes and recharge kits are available.

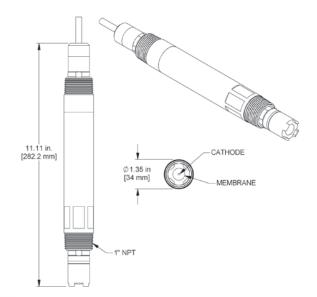

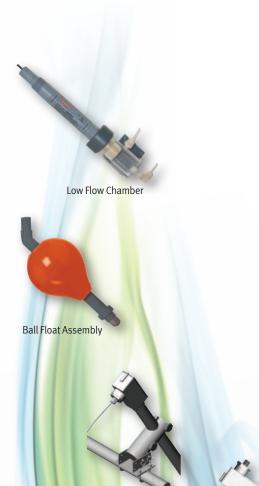

Hand Rail Mounting Assembly

	Specifications
Measurement System Performance [†]	Range: 0 to 40 ppm, 0 to 200 % saturation Resolution: 0.01 ppm Accuracy: 1 % of reading Step Response Time: 90 % in 90 seconds
Operational Environment	Temperature Range: -5 °C to 50 °C Maximum Pressure: 65 psig @ 50 °C Maximum Flow Rate: 10 ft/second
Power	Voltage Range: 10 to 30 VDC
Requirements [‡]	Maximum Power: 200 mW Typical Power: 120 mW
Construction	Process Electrodes: Gold cathode, silver anode, silver reference (3 electrode polarographic clark cell) Membrane: FEP Teflon® O-rings: Viton® (other materials available)
	Sensor Head Material: PEEK DataStick Material: 316 stainless steel, PEEK or CPVC Weight: 1.2 lbs (PEEK or CPVC); 2.6 lbs (316 stainless steel)
Units Of Measure	Measurement Units: ppm, % Temperature Units: °C, °F
Calibration††	Air: Automatically adjusts for set pressure Sample: 1 point Zero: 1 point Temperature: 1 point
Compensation Options	Salinity: 0 mS/cm to 999.9 mS/cm Pressure: 539.2 mm Hg to 792.4 mm Hg Temperature: Automatic from -5 °C to 50 °C
Other Configuration Options	Sensor Filter: 0 to 100 seconds Temperature Filter: 0 to 100 seconds
Approvals And Ratings	Immunity & Emissions: CE certified 89/336/EEC: CISPER 11, EN61000 (-4-2, -4-3, -4-4, -4-6, 4-8) Safety: cULus listed; 367G E303570 Hazardous Locations: Haz Loc Class 1, Division 2, Groups A, B, C, D. Max ambient 50 °C

[‡] Note: Class II DC power supply required

Immersion Mounting with Junction Box

^{††}Note: DO and temperature are pre-calibrated at the factory

Thermo Scientific AquaSensors DO DataStick

- Global support—with experience that comes from supporting our customers for over 35 years throughout the world, our water quality specialists and customer support teams offer a quick, thorough and professional response to any problem encountered.
- Focus on user benefits—we work closely with you to define your needs, and ensure you are using the monitor in a way that improves your bottom line. For more information, contact your local water quality specialists or visit: www.thermoscientific.com/processwater.

DO DataStick Ordering Information		
Part No.	Description	
DS-b-t	DataStick	
Body Material (b)	1 = Stainless steel	
	2 = CPVC	
Maunting (t)	3 = PEEK	
Mounting (t)	1 = 1 inch NPT front/back 2 = 1 inch NPT front only	
	3 = 1 inch tri-clamp	
	4 = 2 inch tri-clamp	
	5 = 3 inch tri-clamp	
	6 = 4 inch tri-clamp	
CA-b-nw-x-y	Communications Adapter	
Body Material (b)	1 = 316 stainless steel	
	2 = CPVC 3 = PFFK	
	4 = Ryton	
Communications	1A = RS232 ASCII	
(nw)	1B = RS485 ASCII	
. ,	2B = Modbus RTU	
	2A = Modbus RS232	
	3A = DF1 RS232	
	3B = DF1 RS485 7R = Ethernet	
	5R = DeviceNet	
	6R = Profibus DP	
	8R = USB	
Cable Length (x)	1 = 10 feet	
	2 = 20 feet	
	3 = 30 feet	
Cable	A = Stripped wires	
Termination (y)		



Thermo Fisher Scientific Water Analysis Instruments Chelmsford, MA USA Quality Management System Registered to ISO 9001

DO-b-t-x-y-z	DO Sensor Head (ppm)
Body Material (b)	3 = PEEK
Electrode Type (t)	1 = Gold/silver
Sensor Tip (x)	A = Protected
	B = Process flat
	C = Face seal for flow chamber
Fill Solution (y)	1 = Standard
Membrane (z)	A = FEP Teflon
	B = FEP membrane with stainless steel mask
TDO-b-t-x-y-z	Trace DO Sensor Head (ppb)
Body Material (b)	3 = PEEK
Electrode Type (t)	1 = Gold/silver
Electrode Type (t)	
Sensor Tip (x)	B = Process flat
	B = Process flat

Accessories Ordering Information		
Part No.	Description	
Local Display/	Local Display/Controller Interface	
AV38	1/4 DIN, outputs, relays,	
	digital communications options	
DO Membrane Caps		
DMR03	PEEK protected (ppm)	
DMR04	PEEK face seal (ppm)	
DMR08	PEEK process flat (ppm)	
DMR13	PEEK protected (ppb)	
DMR14	PEEK face seal (ppb)	
DMR18	PEEK process flat (ppb)	
SBC01	Storage cap with sponge	
DO Solutions		
RD0K1	ppm electrolyte (60 mL bottle)	
RD0K3	ppb electrolyte (60 mL bottle)	
Wash Adapter	s	
MH1142	Air purge, CPVC	
Mounting Hardware		
MH1092	Hand rail mounting assembly, swivel/immersion, PVC	
MH1242	1 inch immersion mounting with junction box, PVC (7 foot extension is standard)	
MH1252	1 inch immersion mounting with swivel rail mount and ball float	
FC001	Flow chamber with mounting plate and PVDF fitting	
FC002	Flow chamber with mounting plate and 316 SS fitting	

Consult factory for additional configurations and accessories.

thermoscientific.com/processwater

© 2013 Thermo Fisher Scientific Inc. All rights reserved. Modbus is a registered trademark of Schneider Electric. DeviceNet is a trademark of ODVA. PROFIBUS is a trademark of PROFIBUS Nutzerorganisation e.V. Teflon and Viton are registered trademarks of E. I. Du Pont De Nemours & Company. All other trademarks are the property of Thermo Fisher Scientific Inc. and its subsidiaries.



Water Analysis Instruments

North America Toll Free: 1-800-225-1480 Tel: 1-978-232-6000 info.water@thermo.com Netherlands Tel: (31) 033-2463887

info.water.uk@thermo.com

Tel: (86) 21-68654588 wai.asia@thermofisher.com India

Tel: (91) 22-4157-8800 wai.asia@thermofisher.com

Singapore Tel: (65) 6778-6876 wai.asia@thermofisher.com

Japan Tel: (81) 045-453-9175 wai.asia@thermofisher.com

Australia Tel: (613) 9757-4300 in Australia (1300) 735-295 InfoWaterAU@thermofisher.com

